



ECHOMASTER


19355213 and 19353504

Running wires thru the door boot


West Coast Operations
2500 East Francis St.
Ontario, CA 91761
800-854-3133
727-573-9326 (Fax)

Corporate Headquarters
15500 Lightwave Drive Suite 202
Clearwater, FL 33760
800-488-2267
727-573-9326 (Fax)

Technical Support 866-766-2267

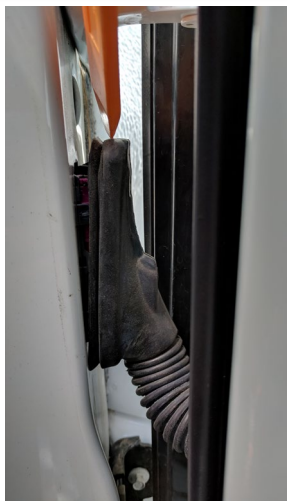

Use panel removal tool to release boot, press down from the top to release

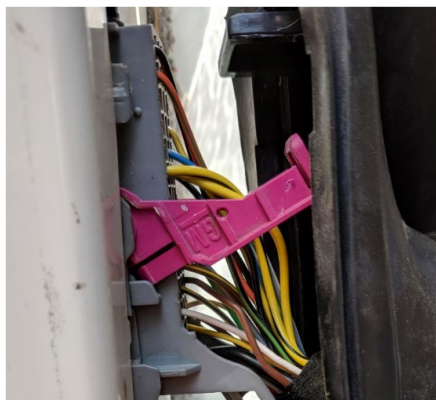


Use panel removal tool to unclip the purple connector and fold to a horizontal position




Push door boot into the door



Pull the entire boot thru the speaker opening, run a zip tie or fish lead from one end to the other. Use this to pull camera wire thru

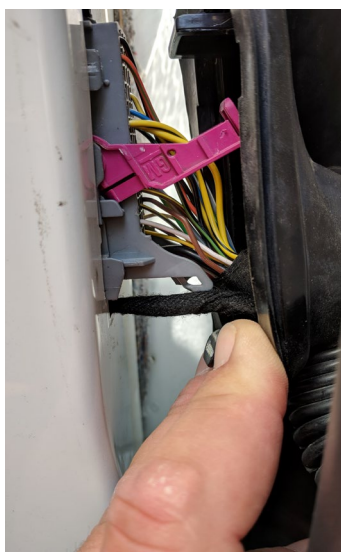

Run the camera wire thru the bottom portion of the boot as well as bottom cavity entering the cab of the truck. Purple clip must stay horizontal until clip is reinserted into connector

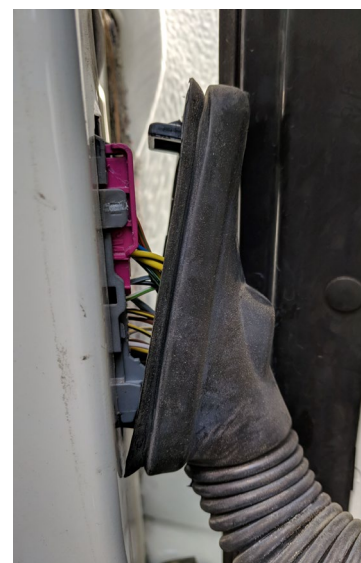

Reinstall the door boot cab side clip starting from the bottom and clipping back into place at the top