

## Technical Bulletin


Technical Support: 727-592-5991 support@aampglobal.com


## Adding Load Resistors to Chrysler Vehicles

In order for Chrysler factory head units to output sound, every speaker output must be presented with a load of AT LEAST 35 ohms. If you are installing a line output converter for aftermarket amplifiers in a 2013+ Chrysler vehicle, you must follow this tech brief in order for the head unit to output sound. The following PAC part is required. These come in bags of 5. Please note that these are 33ohm 5 watt resistors. **DO NOT USE 1/4 watt resistors** as they cannot handle the current that the factory head unit outputs.

## PAC Part number: LR335

## Factory Radio

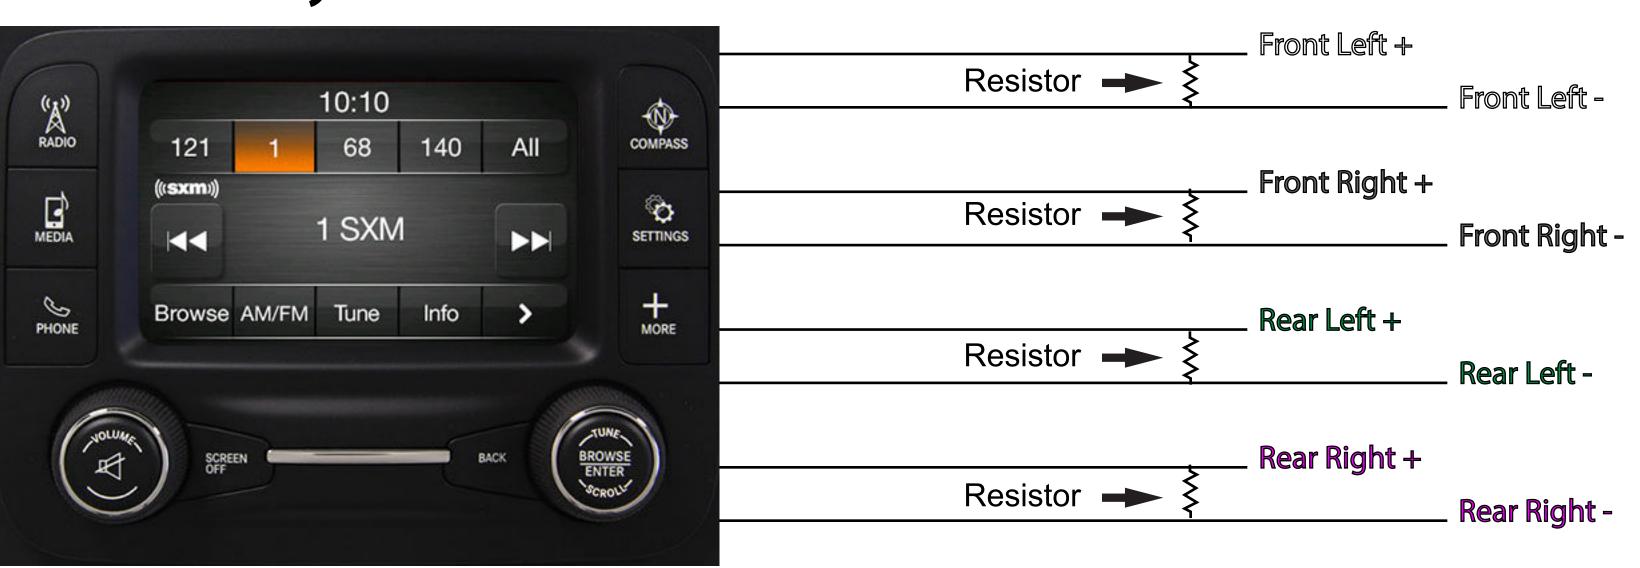

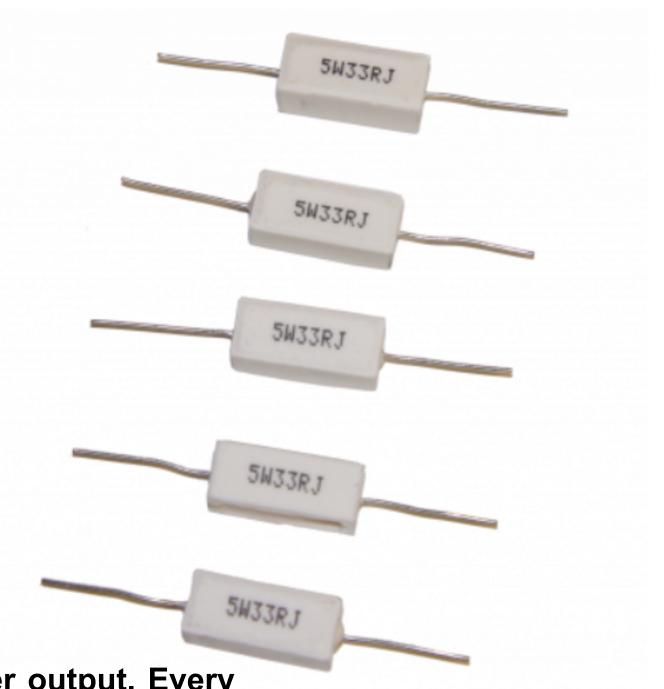

Connect one resistor in parallel across the positive and negative of each speaker output. Every output MUST have a resistor in order for the head unit to output sound. If you STILL do not have sound you will need to connect TWO resistors in parallel and then connect that across each output.